Find us at:


www.crollababy.com

Crolla Malaysia Crollababy

MANUAL GUIDE

CROLLA® IRIS 360

Safety Made Simple

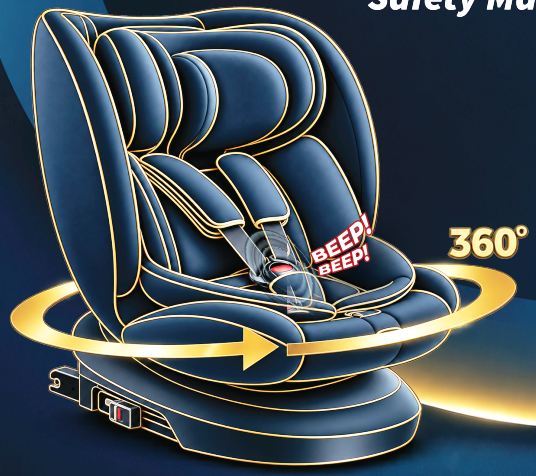

Superbrands MALAYSIA

CONSUMERS' CHOICE AWARD

CONTENT

01 PRODUCT OVERVIEW ——— 02

02 SAFETY WARNING ——— 03-05

03 USAGE ——— 06-11

3.1 Install position of the child seat in vehicle
3.2 Adjust the headrest
3.3 Checking the shoulder strap height
3.4 Usage of buckle
3.5 Adjust the length of harness belt
3.6 Adjust the ISOFIX attachments
3.8 One click adjustment method: rotation & adjust gear
3.9 Top tether adjustment


04 INSTALLATION ——— 12-18

4.1 Installed rearward-facing (Height:40-105CM)
4.2 Installed forward-facing (Height:76-105CM)
4.3 Installed forward-facing (Height:100-150CM)

05 CLEANING AND DISMANTLING ——— 19-20

5.1 Daily maintenance
5.2 Washing instruction
5.3 Remove and assemble the fabric cover

01 PRODUCT OVERVIEW

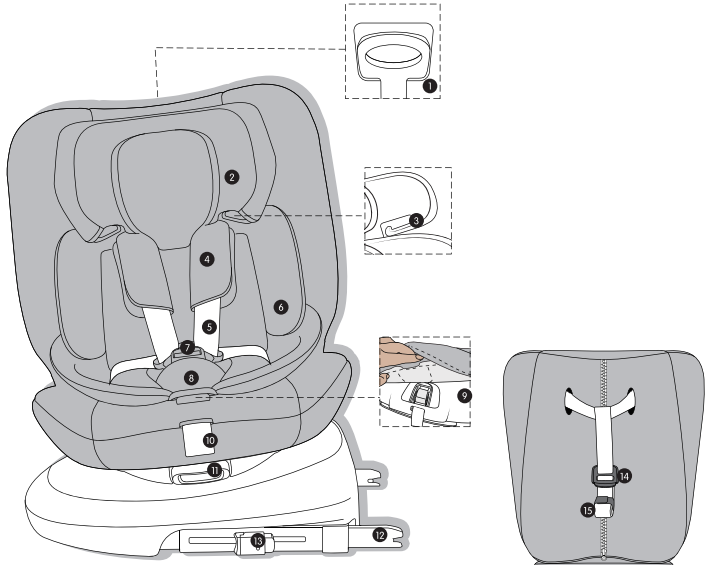

❶ Headrest adjustment level
❷ Headrest
❸ Shoulder belt guide
❹ Shoulder Pad
❺ Harness strap
❻ Infant Cushion
❼ Buckle Alert System
❽ Crotch Pad
❾ Harness adjuster button
❿ Harness adjuster strap
⓫ Rotation & Angle adjuster
⓬ ISOFIX Attachment
⓭ ISOFIX release button
⓮ Top tether release button
⓯ Top tether

02 ⚠ SAFETY WARNING

In order to ensure the safety of your child, please read the relevant instructions carefully to avoid dangerous situations!

Understand the product

This is a height of 40-150cm product, suitable for children from 0-36KG.

		
40-105CM	76-105CM	100-150CM
Rearward-facing	Forward-facing	Forward-facing
		
ISOFIX + Top tether + 5-point belt	ISOFIX + Top tether + 5-point belt	ISOFIX + 3-point belT

* **DO NOT** use forward facing before the child's age exceeds 15 months.


Precautions for product use

- This product can be rearward-facing used for children with a height of 40-105cm (Weight: 0-18kg), using ISOFIX +Top tether to fix the child restraint system.
- This product can also be forward-facing used by 5-point safety system for children with a height of 76-105cm (Weight: 9-18kg), using ISOFIX+Top tether to fix the child restraint system;
- This product can also be forward-facing used for children with a height of 100-150cm (Weight: 15-36kg), using adult three-point belt to fix the child restraint system, or using ISOFIX and adult three-point belt together to fix the child restraint system;
- Only use the contact points described in the instructions and marked in the child restraint between 100-150cm, avoiding any additional load-bearing points.
- Please keep for future reference, a storage compartment for the instructions is located on the back of the child seat.
- Do not use this child seat at home. It has not been designed for home use and should only be used in your car; Do not use rearward facing child seat in seating positions where there is an active frontal airbag installed, death or serious injury can occur;
- For the reason of safety, the child seat must be fixed inside the vehicle using ISOFIX anchorages even if you do not put your child inside the child seat;
- The rigid items and plastic parts of a child seat should be positioned and installed in a way that prevents them from getting caught in a moving seat or a vehicle door during everyday use;

- Any straps holding the restraint to the vehicle should be tight;
- Adjust any restraint straps to fit the child's body snugly without twisting.
- Position lap straps low across the pelvis to hold it firmly, and replace the seat after any high-impact collision.
- Do not alter the seat without Type Approval Authority consent, and follow all manufacturer installation guidelines.
- Keep uncovered seats out of direct sunlight to avoid overheating.
- Never leave a child unattended in the seat.
- Secure all luggage and loose items to prevent injury during a crash.
- Do not use the child seat without its cover.
- Only use manufacturer-recommended replacement covers, as the cover contributes to overall safety performance.
- Store the instruction manual with the seat for its entire period of use.
- Avoid buying or using second-hand seats due to unknown history or potential hidden damage.

03 USAGE


3.1 INSTALL POSITION OF THE CHILD SEAT IN VEHICLE

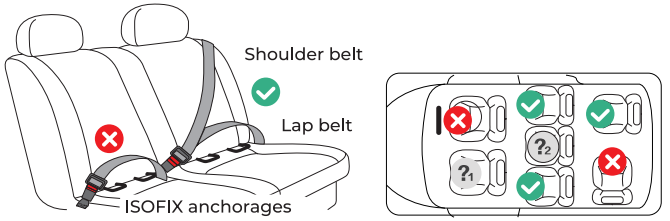

Only suitable if the approved vehicles are fitted with 3 point safety-belt, approved to UN/ECE Regulation No.16 or other equivalent standards

- (?1) Not to use rearward-facing in seating positions where an active frontal airbag is installed.
- (?2) Only use on this seat if ISOFIX anchorages are fitted

3.2 ADJUST THE HEADREST

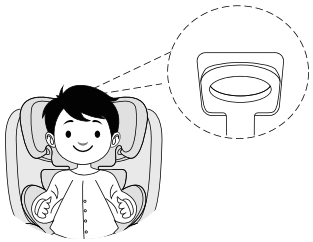

As shown in the picture, you can adjust the headrest up and down by pulling the headrest adjustment level, to a position suitable for the child's head.


3.3 CHECKING THE SHOULDER STRAP HEIGHT



too low　　too high　　slightly higher


Always check that the shoulder straps are positioned at the correct height for your child. The shoulder harness height must be even with or just below the top of child's shoulders.

3.4 USAGE OF BUCKLE

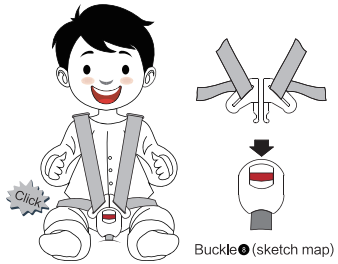


Buckle❸ (sketch map)

- Get the left and the right pieces of buckle together
- Insert the two pieces into the slot of the buckle until hear a "click" sound, means it is buckled successfully.
- Ensure the harness is properly secured by pulling the shoulder straps upwards to check.

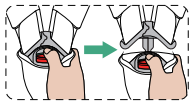


To release the harness, press the red button on the buckle and the pieces will pop up.

3.5 ADJUST THE LENGTH OF HARNESS

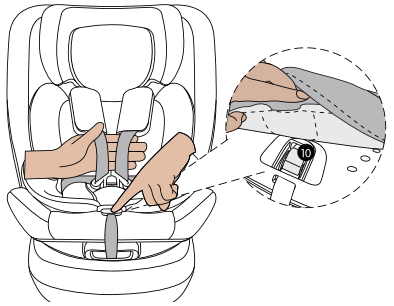


LOOSEN THE HARNESS:

- Press down the button (10) as you grip the two shoulder straps with another hand. Pull the shoulder straps towards you to loosen the harness.

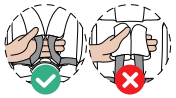


Note:
Hold both shoulder straps at the same time and do not hold the shoulder covers.

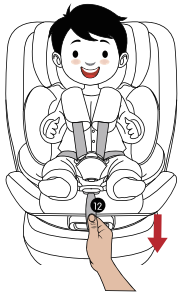

TIGHTEN THE HARNESS:

- Pull the harness adjuster strap (12) until the shoulder straps are fully tightened.
- The harness should be adjusted as tightly as possible without causing discomfort to your child. A loose harness can be dangerous.
- Check the harness adjuster and tighten each time when the child is placed in the seat

3.6 ADJUST THE ISOFIX ATTACHMENTS

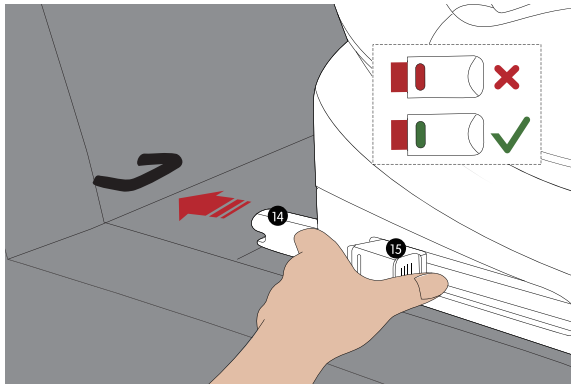


- Press and hold the ISOFIX release buttons on both sides, then push the ISOFIX connectors out.
- Clip them into the ISOFIX anchor points. When you hear a "click" sound and the ISOFIX indicator turns GREEN , it means it is locked.
- To detach, press the release buttons and pull both ISOFIX connectors out.



* Push the child seat until it is tight against the car seat.


3.7 ONE CLICK ADJUSTMENT METHOD

ROTATING & ADJUST GEAR

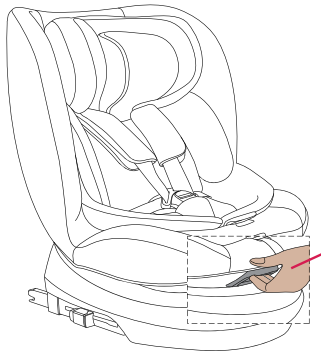


The angle adjuster and rotation adjuster share the same button


Press the angle adjuster, then adjust back and forth to adjust the child seat to gear F1/F2/F3/F4.

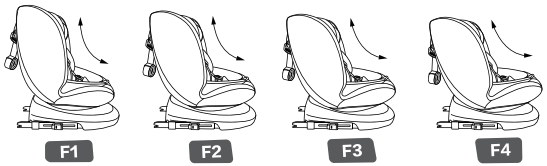


Press the rotation adjuster, then rotate the child seat left and right to adjust to rearward facing or forward facing. When the child seat is rearward facing it can also adjust to gear R1/R2/R3/R4 by pressing the angle adjuster.

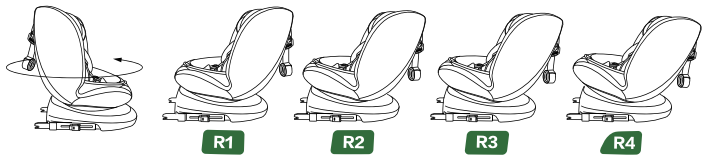


3.8 TOP TETHER ADJUSTMENT

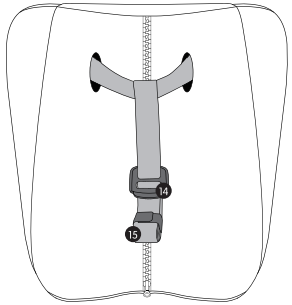


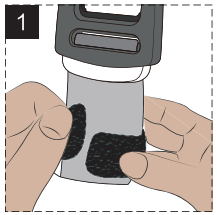


STEP 1:
Tear the storage Velcro.

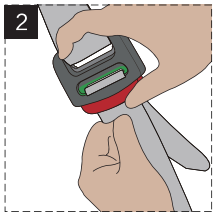

STEP 2:
press and hold the button of the top tether adjuster.

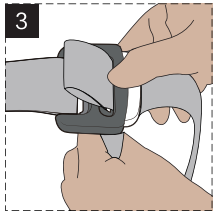

STEP 3:
Release the top tether to the appropriate length.

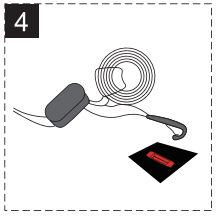

STEP 4:
Hang the top tether connector to the top tether anchorage which recommended in the vehicle user manual. Tighten the top teather until the adjustment indicator shows green.


04 INSTALLATION

Notice before Installation

	Small Headrest + Cushion	Shoulder pads / Shoulder straps	Crotch pad	Buckle
40–87CM	✓	✓	✓	✓
87–105CM	⊘	✓	✓	✓
100–150CM	⊘	⊘	⊘	⊘

4.1 REARWARD-FACING INSTALLATION


Usage : ISOFIX+Top tether
Height: 40–105cm

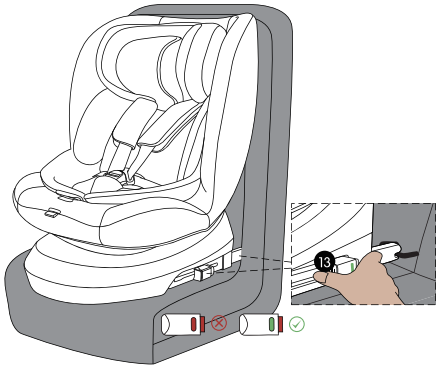

Step 1:

Extend the ISOFIX attachments on both sides and clip into the ISOFIX anchor points in the car until you hear a "click" sound. Make sure that the ISOFIX indicator turns to GREEN.

Then, push the child seat until it is tight against the car seat.

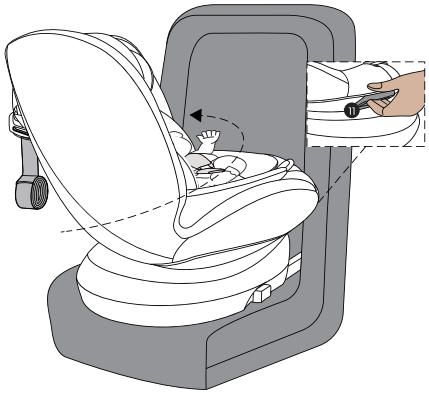


Step 2:

Press the rotation adjuster and turn the child seat to rearward facing position. When you hear a “click” sound, that means it is locked.


Pay attention!!

Do not drive when the safety seat is positioned at a 90° angle.

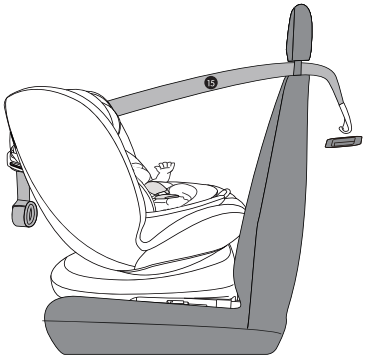

Step 3:

Extend the top tether strap to a suitable length, and then clip the top tether connector to the top tether anchorage of the car seat.

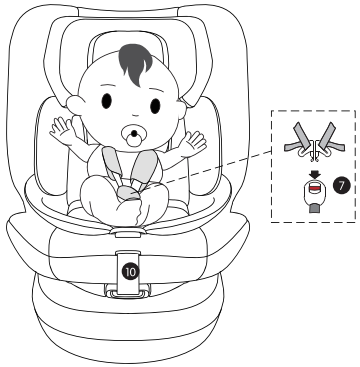

Step 4:


Place the child on the child seat and insert the buckle into the buckle slot until you hear a "click" sound. Then, tighten the harness by pulling the harness adjuster strap.

**The harness should be adjusted as tightly as possible without causing discomfort to your child. A loose harness can be dangerous.*

**Check the harness adjuster and tighten each time when the child is placed in the seat.*

4.2 FOWARD FACING INSTALLATION

Usage : ISOFIX+Top tether
Height: 76–105cm

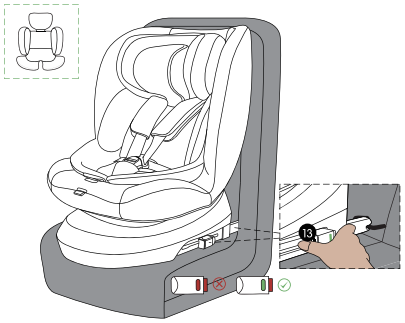

Step 1:

Extend the ISOFIX attachments on both sides and clip into the ISOFIX anchor points in the car until you hear a "click" sound.


Make sure that the ISOFIX indicator turns to GREEN.

Then, push the child seat until it is tight against the car seat



Step 2:

Extend the top tether strap to a suitable length, and then clip the top tether connector to the top tether anchorage of the car seat.

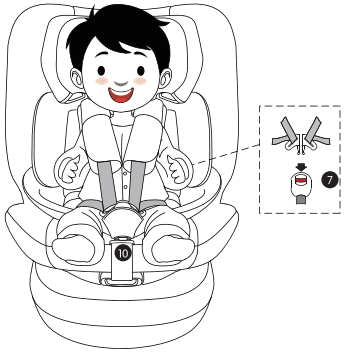

Step 3:

Place the child on the child seat and insert the buckle into the buckle slot until you hear a "click" sound. Then, tighten the harness by pulling the harness adjuster strap.

**The harness should be adjusted as tightly as possible without causing discomfort to your child. A loose harness can be dangerous.*

**The crotch straps should be as low as possible and should be located close to the crotch, not the abdomen.*

**To ensure the comfort of your child, the safety belt must not be twisted*

4.3 FOWARD FACING INSTALLATION

OPTION 1
Usage : ISOFIX + 3 point belt
Height: 100–150cm





***100-150cm. please remove the cushion padding, crotch pad, buckle, shoulder pad and the shoulder straps.**

Extend the ISOFIX attachments on both sides and clip into the ISOFIX anchor points in the car until you hear a "click" sound. Make sure that the ISOFIX indicator turns to GREEN.

Then, push the child seat until it is tight against the car seat.

Place the child on the child seat and adjust the headrest according to the child's height.

Pull out the 3 point seat belt then pass through the shoulder belt guide of the headrest and the lap belt must pass through the lap belt guidings. Finally, you can buckle it.


OPTION 2
Usage : Only 3 point belt
Height: 100–150cm

Shoulder belt Lap belt



Place the child on the child seat and adjust the headrest according to the child's height.

Pull out the 3 point seat belt then pass through the shoulder belt guide of the headrest and the lap belt must pass through the lap belt guidings. Finally, you can buckle it.

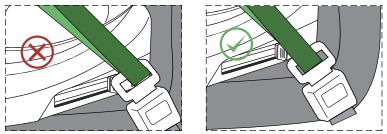

**When using the child seat, it should be confirmed that the buckle of the adult 3-point belt does not interfere with the main load-bearing contact point of the child restraint system. If there is any doubt, please contact the manufacturer of the child restraint system.*

05 CLEANING AND DISMANTLING

5.1 Daily Maintenance


- During regular use, periodically check the child seat. Replace child seat after an accident to ensure safety.
- Please keep this child seat in dry and ventilated place to avoid damp moldy.
- If the child seat becomes dusty, clean the seat belt and plastic pieces by swiping them with a damp sponge and let it dry under ambiance.
- Please hang dry the soft goods in the shade.
- If food or drink spills on the buckle, remove the seat belt from the seat and rinse it gently with warm water. Let it air dry.
- For cleaning the entire child seat fabric cover, please refer to the washing instruction.


5.2 Washing Instruction

- Never use any solvent, chemical detergent or lubricant on any part of your child seat



5.3 Remove and assemble the fabric cover

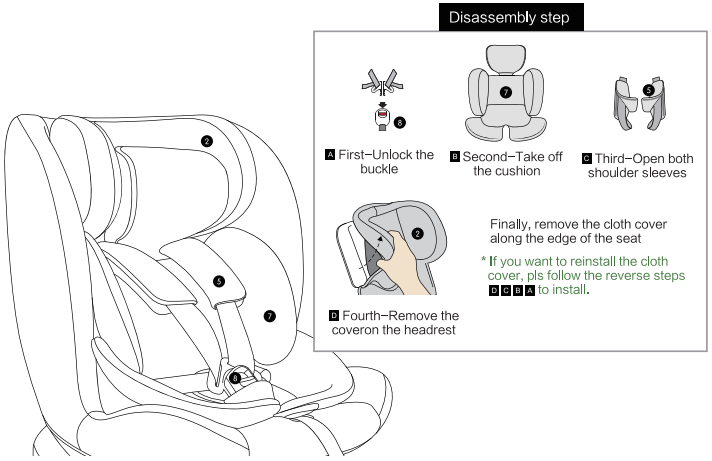

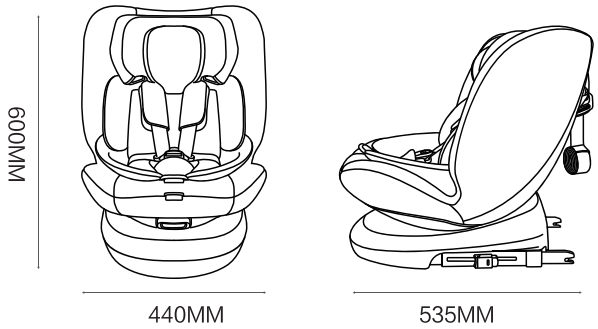

- Distance from front to back of the seat:535mm
- Distance form left to right of the seat:440mm
- Height of the seat:600mm