

CHILD RESTRAINT SYSTEM INFORMATION

MODEL **AY158 (NEXUS DUALFIX)**

GROUP **0+ / I / II / III**

BRAND **CROLLA**











UNR TESTING INFORMATION

Regulation	ECE R44/04
Approval Number	E8*44R04/14*10684*01
CTA Reference Number	JPJ.BKA.600-3/3/33 Jld 124(40)
CTA Approval Date	18 FEBRUARY 2022

INSTALLATION TYPE

Installation Type/ Direction	Seatbelt	ISOFIX	Top Tether	Support Leg
Rear Facing	✓	N/A	N/A	N/A
Forward Facing	✓	✓	✓	N/A

PHOTOS

	Front view	Left view	Rear view	Right view
Rear Facing				
Forward Facing				

CHILD RESTRAINT SYSTEM INFORMATION

COLOUR VARIANT



TIFFANY BLUE


INSTALLATION

Group

Installation Method

0/0+
Up to 83cm
0-13kg

5.1 installed rearward-facing using 3-point belt (group 0+, 0-13kg)

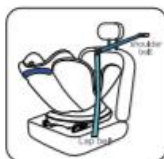

- Step1: Place the child seat on the car seat with rearward-facing mode and make sure that the front of the child seat is firmly pressed against the car seat backrest. Take off the cushion and thread the lap belt through the same side belt guidance.



- Step2 : Pass the waist belt over lap belt guiding, and then engage the vehicle buckle. Recheck whether the seat buckle is locked correctly and pull the seat belt to ensure it is tight and secure before moving to next step.



- Step3 : Fasten the shoulder belt in the shoulder-belt slot at the back of the child restraint and pull it tightly.




- Step4: Place your child into safety seat. Check whether the shoulder harnesses are at the proper height and fasten the buckle.

CHILD RESTRAINT SYSTEM INFORMATION

1
71cm and above
9-18kg

5.2 installed forward-facing using ISOFIX anchorage. (group 1, 9-18kg)
IMPORTANT: Please remove the cushion for 9-months-old child.

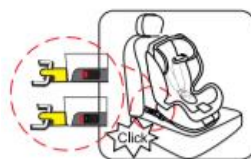

- Step 1: Place the child seat on the car seat with forward-facing mode put the ISOFIX attachments into guide sleeves, and insert them into ISOFIX anchorages. Make sure that you have hear a "click" and the color of ISOFIX indicators show GREEN.



- Step 2: As the picture shows, the top tether and bag should be turned to the upper place of the backrest, to prevent folding between child seat and the car.




- Step 3: Push the child seat towards the car seat backrest, check the ISOFIX release button again and ensure the color of ISOFIX indicators show GREEN.



- Step 4: As picture shows, guide the top tether through the headrest of the car.



- Step 5: Make sure that tether hook is securely attached to the anchorage fitting.

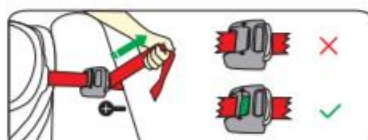

- Step 6: Pull the strap tightly. The color of the indicator on tether strap adjuster should be completely green.



- Step 7: As picture shows, put your child on the child seat. Check the height of the shoulder straps on the correct position and fasten the buckle. Check that the harness has not become twisted and also the cover should not impede the movement of harness in anyway.

OR

5.3 installed forward-facing using 3-point belt. (group 1, 9-18kg)



- Step 1: Place the child seat on the car seat with forward-facing mode and make sure that the front of the child seat is firmly pressed against the car seat backrest. Clip the lap belt into the same side belt guide groove of the child seat.



- Step 2: Pass the waist belt over lap belt guiding through the child's seat as shown in the picture.



- Step 3: Fasten the vehicle buckle tongue into the buckle and make sure that you have hear a "click". Recheck whether the seat buckle is locked correctly and pull the seat belt to ensure it is tight and secure. Check whether the shoulder harnesses are at the proper height.

CHILD RESTRAINT SYSTEM INFORMATION

2
100cm and above
15-25kg

5,4 installed forward-facing using ISOFIX and top tether. (group 2- 3, 15-36kg)

⚠ **IMPORTANT:** When using for Group2- 3, you can remove the cushion, chest pad and crotch pad. Also, the five point belt and buckle can be hidden.(See 4.6)



• Step 1: Place the child seat on the car seat with forward-facing mode put the ISOFIX attachments into guide sleeves and insert them into ISOFIX anchorages. Make sure that you have hear a "click" and the color of ISOFIX indicators show GREEN.

• Step 2: Push the child seat towards the car seat backrest, check the ISOFIX release button again and ensure the color of ISOFIX indicators show GREEN.



• Step 3: Make sure that tether hook is securely attached to the anchorage fitting.



• Step 4: Pull the strap tightly. The color of the indicator on tether strap adjuster should be completely green.



• Step 5: Place the child in the child restraint and check whether the shoulder belt guides are at proper height (see 4.5). Position shoulder belt through shoulder belt guide, pass waist belt through lap belt guidings. Fasten buckle and pull the vehicle belt to tighten.


OR

5,5 installed forward-facing using 3-point belt. (group 2- 3, 15-36kg)

⚠ **Attention:** For Group 2- 3, you can use the child seat without ISOFIX system and use 3 point belt only. You can remove the comfortable cushion, chest pad and crotch pad; you can also hide five point harness system and the buckle. (See 4.6)



• Step 1: Push the child seat towards car seat backrest tightly. (See 4.7)

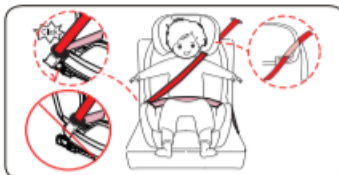

• Step 2: Place the child in the child restraint and check whether the shoulder belt guides are at proper height (see 4.5). Position shoulder belt through shoulder belt guide, pass waist belt through lap belt guidings. Fasten buckle and pull the vehicle belt to tighten.

CHILD RESTRAINT SYSTEM INFORMATION

3
Up to 135cm
22-36kg

5.4 installed forward-facing using ISOFIX and top tether. (group 2- 3, 15-36kg)

⚠ **IMPORTANT:** When using for Group2- 3, you can remove the cushion, chest pad and crotch pad. Also, the five point belt and buckle can be hidden. (See 4.6)




• Step 1: Place the child seat on the car seat with forward-facing mode put the ISOFIX attachments into guide sleeves, and insert them into ISOFIX anchorages. Make sure that you have hear a "click" and the color of ISOFIX indicators show GREEN.

• Step 2: Push the child seat towards the car seat backrest, check the ISOFIX release button again and ensure the color of ISOFIX indicators show GREEN.



• Step 3: Make sure that tether hook is securely attached to the anchorage fitting.



• Step 4: Pull the strap tightly. The color of the indicator on tether strap adjuster should be completely green.



• Step 5: Place the child in the child restraint and check whether the shoulder belt guides are at proper height (see 4.5). Position shoulder belt through shoulder belt guide, pass waist belt through lap belt guidings. Fasten buckle and pull the vehicle belt to tighten.

OR

5.5 installed forward-facing using 3-point belt. (group 2- 3, 15-36kg)

⚠ **Attention:** For Group 2- 3, you can use the child seat without ISOFIX system and use 3 point belt only. You can remove the comfortable cushion, chest pad and crotch pad; you can also hide five point harness system and the buckle. (See 4.6)



• Step 1: Push the child seat towards car seat backrest tightly. (See 4.7)



• Step 2: Place the child in the child restraint and check whether the shoulder belt guides are at proper height (see 4.5). Position shoulder belt through shoulder belt guide, pass waist belt through lap belt guidings. Fasten buckle and pull the vehicle belt to tighten.